Displaying Your Favorite Pictures is Easy and Fun

32 inch

Digital Picture Frame

User's Manual

Table of Contents

Table of Contents....2
Important Safety Precautions....4
- Cleaning the LCD Screen....4
- Cleaning the Digital Picture Frame....5

Introduction....5
What's In the Box....6
- Setting Up the Digital Picture Frame....6

Locating the Digital Picture Frame's Features....6
Using the Control Buttons and Remote Control....7
- Use the Control Buttons....7
- Use the Remote Control....8
- Install and Replace the Remote Control Battery....8

Setting Up the Slideshow....9
- Card Selection Screen....9
- Mode Selection Screen....10
- Thumbnail Screen....10
- Display a Single Photo on the Full Screen....11

Controlling the Slide Show and Photo....11
- Manually Change the Displayed Photo....11
- Rotate the Photo....11
- Enlarge the Photo....11
- Copy the Displayed Photo to the Built-In Memory....12
- Delete the Displayed Photo....12
- Adjust the LCD Color....12
- Add Music to the Slide Show....12

How to copy pictures from Flash Card into Built-in memory....13
Listening to Music....14
- Control the Volume....14

Watching a Video....14
- Setting Viewing Options....15

Advanced Operations....16
Frequently Asked Questions....17
Technical Specificatons....18
Assembly Instructions....19

Important Safety Instruction

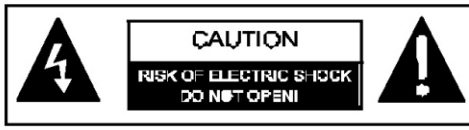

WARNING: To reduce the risk of fire or electric shock, DO NOT expose this product to rain or moisture.

The lighting flash with arrowhead symbol, within an triangle, alerts the user to " dangerous voltage" which could cause electric shock.

The exclamation point within a triangle indicates to the user to read important operating and maintenance instructions in the manual.

Notes

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over

13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15) Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Important Safety Precautions

Read these instructions, keep these structions, Heed all warnings.
Always follow these basic safety precautions when using your Digital Picture Frame. This will reduce the risk of fire, electric shock, and injury.

Warning: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

Warning: To prevent the risk of electric shock, do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.

- The Digital Picture Frame is for indoor use only.
- Unplug the Digital Picture Frame before performing care and maintenance.
- Do not block the ventilation holes on the back of the Digital Picture Frame at any time.
- Keep your Multimedia Digital Picture Frame out of direct sunlight and heat sources.
- Please connect the apparatus with class I construction to a mains socket outlet with aprotective earthing connection.
- Please securely the apparatus attached to the floor/wall in accordance with the installation instructions.
- Please state that where the mains plug or an appliance coupler is used as the disconnect device in the instructions and the disconnect device shall remain readily operable.
- The apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.
- Unplug the power cord from the outlet when the unit is not in use.
- Only use attachments/accessories specified by the manufacturer.

Cleaning the LCD Screen

Treat the screen gently.

To clean fingerprints or dust from the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.

If you use a commercial LCD Cleaning Kit, do not apply the cleaning liquid directly to the LCD screen. Clean the LCD screen with cleaning cloth moistened with the liquid.

Cleaning the Digital Picture Frame

Clean the outer surface of the Digital Picture Frame (excluding the screen) with a soft cloth dampened with water.

Introduction

Welcome to the Digital Picture Frame! Now you can display your digital photos directly from your memory card. No computer is necessary. Simply insert a memory card into the Digital Picture Frame, and press the power. You'll be treated to a slideshow of your photos. It's as easy as that. You can also display individual photos, play video clips, and play background music with your slide show.

The Digital Picture Frame includes these key features:

- Displays digital photos (JPEG) without a computer.
- Simply insert a compatible memory card into the digital picture frame to show photos, play music or supported video files (memory card not included).
- Compatible memory cards include Secure Digital™, MultiMedia Card™, Compact Flash™, Memory Stick™, MemoryStick Pro™, Memory Stick Duo™, Memory Stick Pro Duo™ and xD Card.
- Instantly plays music with the integrated speakers.
- Digital photo slide Show with Music background.
- Displays JPEG images and motion JPEG files (AVI) stored on digital cameras.
- Supports up to 12 megapixel image files (JPEG format).
- Control the main functions with buttons on the frame or with the included infrared remote control.
- Bright TFT LCD screen.
- USB2.0 (Host)
- Built-In Memory.

To learn more about your new Digital Picture Frame's features, and take full advantage of them, please take a few minutes to read this User's Guide.

What's In the Box

Digital Picture Frame

AC Power Cable

This User's Guide

Remote Control

Setting Up the Digital Picture Frame

The Digital Picture Frame is easy to set up. Just follow these steps:

1. Plug the AC Power Plug into the Digital Picture Frame and into a wall outlet.

2. Insert a memory card into the appropriate slot.
   Slot 1 - Secure Digital™ or MultiMedia Cardt™,Memory Stick™, MemoryStick Pro™, Memory Stick Duo™ ,Memory Stick Pro Duo™,xD Memory Card™
   Slot 2 - Compact Flash™

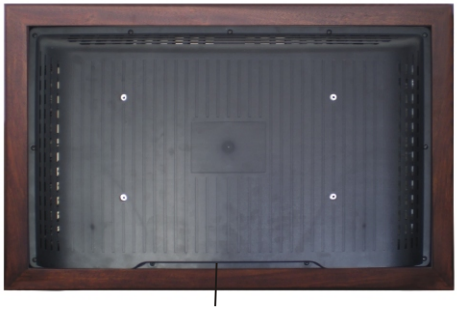

Note: The card will only fit in one direction; do not force it. The card should fit snugly when properly inserted.

3. Press the power button on the back of the Digital Picture Frame ON and holding 2 Seconds. until the LED light is on beside the Digital Picture Frame. It will automatically start a slide show of the photos on the card.

4. To display photos individually, press the Exit button to open the Thumbnails Screen. Use the Left and Right arrows to choose a photo. Press the Play button (>/II) on the top of the Digital Picture Frame, or the Enter button on the remote control.

Note: Pull the plastic tab sticking out of the remote control. It protects the battery, and the remote control will not work unless it is removed.

Locating the Digital Picture Frame's Features

Photo and description of buttons on picture frame.

Using the Control Buttons and Remote Control

You can use all of the Digital Picture Frame's features with either the buttons on bottom of the frame or using the remote control.

Use the Control Buttons

The control buttons are located on bottom of the Digital Picture Frame. Their basic functions are the same no matter when you press them.

Note:You can open the Setup Menu at any time by pressing the MENU button.
Except in the SlideShow Mode.

Use the Remote Control

The remote control included with your digital picture frame may look slightly different from the one shown here, but it includes all of the same buttons, and functions in the same way.

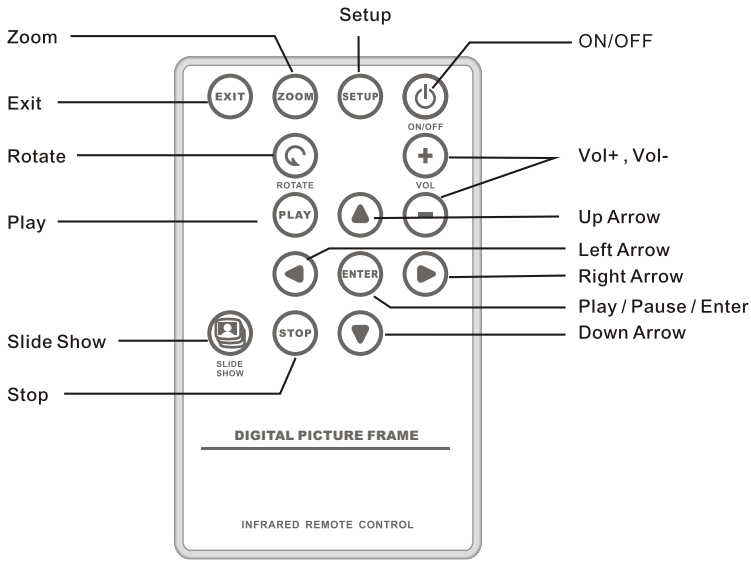

Install and Replace the Remote Control Battery

1. Hold the Remote Control with the control buttons facing downward.
2. While pressing down on the ridged area of the battery cover, pull the tray out.
3. Place a "CR2025" Lithium battery on the tray with the positive "+" end facing toward you.
4. Close the tray.

Setting Up the Slideshow

You can control all of the Digital PictureFrame functions with the buttons on the bottom of the frame or with the remote control. To display the setup screen, simply hold down the Exit button for 2 seconds, or press the Setup button on the remote control.

Card Selection Screen

Use the Card Selection menu to choose between memory cards and the build-in memory.

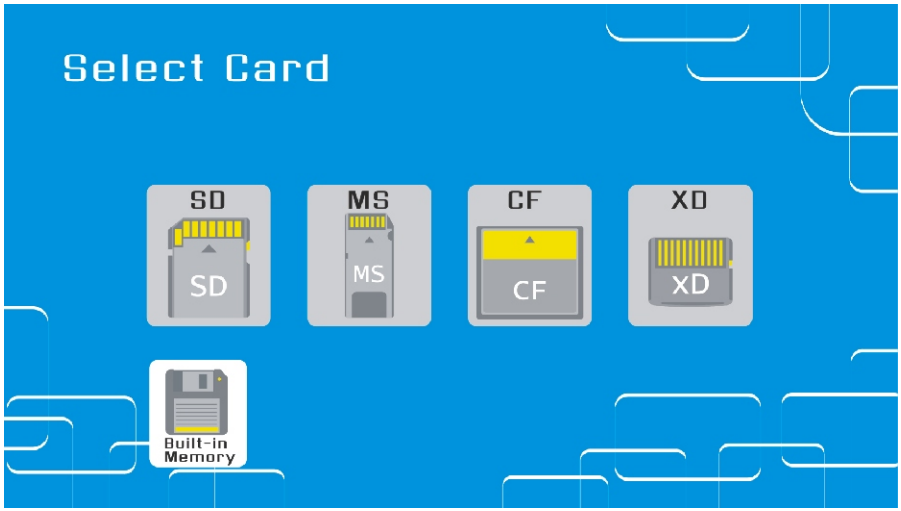

1. To open the card select menu, either insert a new card, or press the Exit button repeatedly to back through the screens until you see it.

2. Press the Left and Right arrows to select the desired memory card, or built-in memory.

3. Press Enter to make the selection. The Mode Selection Screen opens.

Mode Selection Screen

The Mode Selection Screen shows after you choose the memory source. Use it to choose the type of files you wish to display.

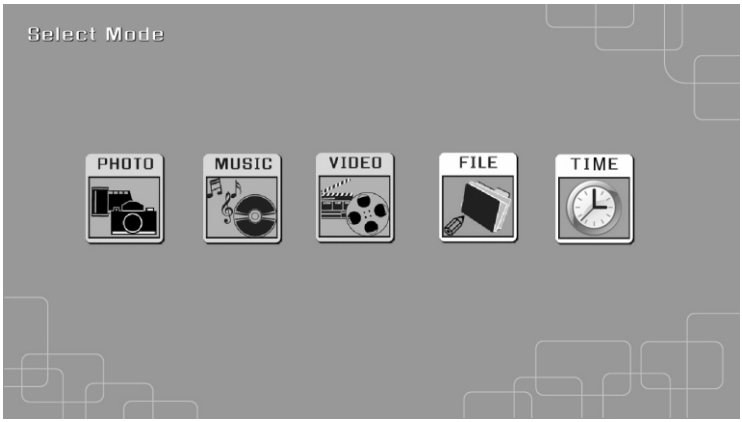

Slide Show	Display slide show
Photo	Display JPEG still photo slide shows.
Music	Play audio files.
Video	Show motion JPEG AVI movies.
Clock	Clock & Calendar

1. Press the Left and Right arrows on the Remote Control or the Digital Picture Frame to select the mode.

2. Press Enter to make the selection. If you selected PHOTO, the Thumbnail Screen opens. It is described below.

   If you selected any of the other file types, a screen listing all of the files with the chosen type. You can select one in the same manner as a photo.

3. To go back to the Mode Selection Screen, press Exit.

Thumbnail Screen

This screen shows thumbnail versions of all photos on the selected memory source; up to 15 photos are displayed at a time. Use this screen to select a single photo to display, or to start a Slide Show of all of the photos.

1. Press the Arrow Buttons on the Remote Control or the Digital Picture Frame until the desired photo is highlighted. The photo's filename is displayed at the top of the screen. The notations at the top of the screen also indicate if there is

2. Press the Slide Show button to start a slideshow.

3. To stop the Slide Show and return to the Thumbnail screen, press the Exit button.

Display a Single Photo on the Full Screen

You can choose a single photo to display, without a Slide show.

1. With the Thumbnails screen displayed, press Enter to display the selected photo on the full screen.

2. Press the Left Arrow to return to the previous photo.

3. Press the Right Arrow to display the next photo.

4. To stop the display and return to the Thumbnail screen, press the Exit button.

Controlling the Slide Show and Photo

The digital Photo Frame provides many options for customizing the display, and managing files. These options are available when viewing photos only.

Manually Change the Displayed Photo

During a Slide Show, each photo replaces the previous one at a selected rate (See Slide Show Speed).
You can also change the displayed photo at any time during a slide show.

- Press the Left Arrow to return to the previous photo.

- Press the Right Arrow to display the next photo.

Rotate the Photo

You can rotate a photo displayed full-screen using the Remote Control.
Press the rotate button to rotate the photo 90 counterclockwise.

Enlarge the Photo

To magnify a photo displayed full-screen, press the Zoom button.

- The photo doubles in size each time you press the button until it is 4x normal size. Then it will return to normal size.

- While the photo is in enlarged, use the Arrow buttons to move the photo so you can see the portions that aren't currently visible.

Copy the Displayed Photo to the Built-In Memory

Use the Remote control to copy the displayed photo from the memory card to the built-in memory.

1. Press the Setup button. A setup menu opens.
2. Press the Up or Down arrow to select Copy Photo.
3. Press Enter. A confirmation message is displayed.
4. Press Exit to close the menu.

Delete the Displayed Photo

Use the Remote control to a photo from the built-in memory.

1. Press the Setup button. A setup menu opens.
2. Press the Up or Down arrow to select Delete Photo.
3. Press Enter. A confirmation message is displayed.

Caution: The photo will be deleted immediately; you will not be able to change your mind.

4. Press Exit to close the menu.

Adjust the LCD Color

Choose this option to adjust the Brightness, Contrast, Tint, and Color of the display.

1. Press the Setup button. A setup menu opens.
2. Press the Up or Down arrow to select Adjust LCD Color.
3. Press Enter. A second menu opens.
4. Use the Arrow buttons to select an option to adjust.
5. Use the Right and Left arrows to adjust the option. The display changes.
6. Use the Arrow buttons to select another option to adjust.
7. When the display looks the way you want it to, press Exit to close the menu.

Add Music to the Slide Show

To play background music with a slideshow, copy audio files onto the same memory card as your photos. The music will play as the slide show runs.

You can also choose a music file to play without a Slideshow. Just select it from the Music screen.

Note: Music files must be standard MP3 format and not from licensed music download services.

How to copy pictures from Flash Card into Built-in memory?

(1) In the Thumbnail Screen

a. select pictures by press Up.Down.Left and Right button.

b. confirm by press Vol+ button; cancel by Vol- button.

c. press Setup button firstly, then select Copy Picture and then copy selected.

Other way: press Setup button firstly, then select Copy Picture, and then Copy All, in this way, all the pictures will be copied into built-in Memory.

(2) In the File Mode

a. select files by press Up or Down button.

b. confirm by press Vol+ button; cancel by Vol- button.

c. press Setup button firstly, then select Copy.

2. Slide show selected

(1) In the Thumbnail

a. select pictures by press Up, Down, Left or Right button

b. confirm by press Vol+ button; cancel by Vol- button.

c. Press Setup button firstly, then select Slide Show, and then Slide Show selected.

3. Delete pictures from Built-in Memory

(1) In the Thumbnail

a. select pictures by press Up, Down, Left or Right button.

b. confirm by press Vol+ button; cancel by Vol- button.

c. press Setup button firstly, then select Delete, and then Delete Selected.

Other way: press Setup button firstly, then select Delete, and then Delete All, in this way, all the pictures will be deleted from Built-in Memory.

(2) In the File Mode

a. select files by press Up or Down button.

b. confirm by press Vol+ button; cancel by Vol- button.

C. press Setup button firstly , then select Delete.

Listening to Music

If there are Music files on a memory card or in the built-in memory, you can play them on the Digital Picture Frame.

1. Use the Remote Control to open the Select Mode screen (described above) and select Music. A new screen opens listing all of the music files on the selected card.

2. Use the left and right arrows to choose a file.

3. Press the Enter button to play the file.

4. To stop the music and return to the Music screen, press the Exit button.

Control the Volume

Use the Remote Control to adjust the volume on the Digital Picture Frame or when playing Audio files.Press the **VOL+**/**VOL -** buttons to adjust the volume up or down.

Watching a Video

You can watch video files on your Digital Picture Frame as well. It supports the Motion JPEG (AVI) video format used by most digital cameras.

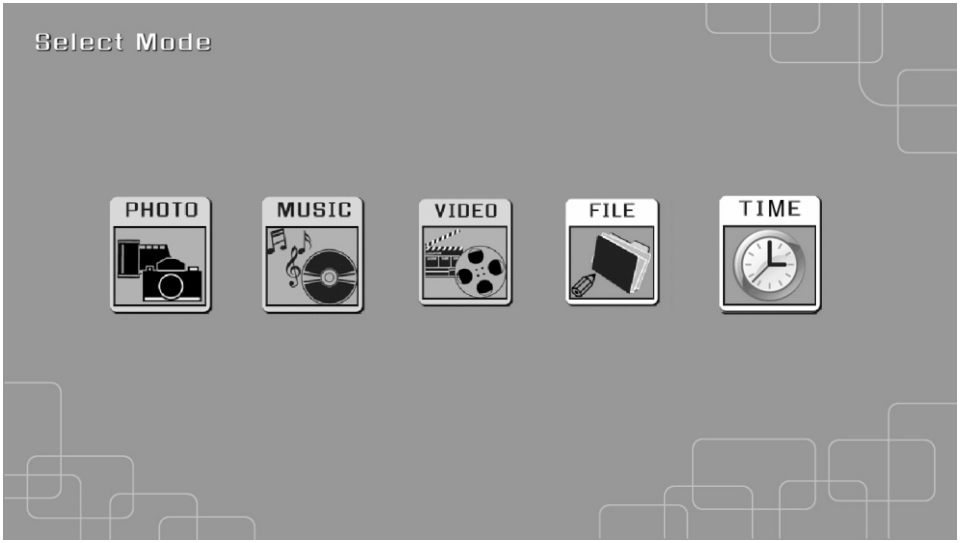

To watch a video, there need to be video files on the memory card.

1. Insert a memory card with video files on it. The Card Selection Screen opens. Choose the desired card.

2. Press Enter. The Mode Selection screen opens.

3. Use the Arrow keys to choose Video and press Enter. A screen listing all of the video files opens.

4. Use the Arrow buttons to choose the desired file and press Enter. The Digital Picture Frame plays the video.

5. Adjust the volume by using **VOL+**/**VOL** buttons on the Remote Control.

. 6. Press direction buttons ▲▼◀▶ to select a different video file.

Setting Clock and Calendar

The digital photo frame supports the functions of clock and calendar. Entering Clock mode and select Set up, you will see the options: Set Current Time.

Notice: please press Left/Right key to choose the hh-mm-MM-DD-YY, and press Up/Down key to modify the number of time , and press Enter to save the time.

Setting Viewing Options

You can control all of the viewing options in the Setup Menu using the buttons on the bottom of the frame or the remote control. You can display the on-screen Setup Menu any time the Digital Picture Frame is not displaying Photos or Videos, by pressing the Setup button.

1. To show the Setup menu during a photo or video, press the Exit button, then the Setup button.

2. With the Setup menu open, use the Up and Down arrows to choose a display option.

3. Press Enter to select the option. A second menu opens, listing the available settings. A white square shows the current setting.

4. Use the Up and Down arrows to choose the desired setting.

5. Press Enter to select the setting. The second menu closes.

6. You can make as many changes as you wish in the same manner. When you are finished, press the Exit button to close the Settings Menu and return to the Thumbnails screen.

7. The following table lists the display options in the Setup Menu, their options, and a description of their actions.

Display Option	Settings	Description
Display Image Size	Original/Optimal	The Digital Picture Frame can optimize your photos to display on the screen.
Slide Show Transition	Normal	Special effects shown to transition from one photo to the next in a Slide Show.
	Random	
	Fade	
	Curtain	
	Open_Door	
	Cross_Comb	
Slide Show Speed	Fast	Determines how quickly the next photo is displayed.
	Medium	
	Slow	
Slide Show Music	On/Off	The selected music file will repeat continuously, or play once.
Slide Show Shuffle	On/Off	Displays photos randomly.
Video Playback Repeat	Repeat Single	Choose to repeat a single video playback, all videos, or none.
	Repeat All	
	No Repeat	
Audio Playback Repeat	Repeat Single	Choose to repeat a single audio file, all audio files, or none.
	Repeat All	
	No Repeat	
Power Saving	2 Hours	The Digital Photo Frame will turn itself off after the specified amount of time.
	4 Hours	
	8 Hours	
	No Power Saving	
Factory Default	--	Immediately returns all settings to the factory defaults.There is no warning message.

Copy File	This allows a file to be copied from a memory card into the internal flash memory.
Delete File	This allows an image to be deleted from the internal flash memory.
Rotate	This allows a file to be rotated 90 degrees clock-wise
Zoom	This allows you to zoom into a picture.
Brightness/ Contrast	This function allows you to adjust the brightness of the screen and adjust the contrast
Color/ Tint	This function allows you to adjust the color and adjust the tint
Set Current Time	Clock & Calendar setting
Delete Build in Memeory	Delete all files from internal memory

Frequently Asked Questions

Q: How do I set up my Digital Picture Frame?
A: It is very simple to get your Digital Picture Frame out of the box and running in just a few minutes. Just plug the power adapter into the Digital Picture Frame and into a standard Wall Socket. Insert a memory card into the appropriate card slot on the side of the Digital Picture Frame, and turn it on. Your first slide show will automatically start to play.

Q: What memory cards can the Digital Picture Frame Read?
A: Compatible memory cards include Secure Digital™, MultiMedia Card™, Compact Flash™, Memory Stick™, MemoryStick Pro™, Memory Stick Duo™, Memory Stick Pro Duo™, and xD card.

Q: I set up the Digital Picture Frame; why won't it turn on?
A: The Adapter is not securely connected to the Picture Frame or the Power Switch is not on.

Q: I have a memory card in the Digital Picture Frame; why can't I view my photos?
A: First, make sure that thememory card is one of the formats listed above and that the files on the card are JPEG images files. Second, turn the Digital Picture Frame Off and make sure that the memory card is inserted all the way into the card slot and is facing the correction. Third, turn the Frame On. After a couple of seconds, you should see your first photo. Press Exit to open the Card Selection screen and select the card. Then select Photos. You should see the Thumbnails screen listing all photos on the card. If you don't, you may want to try another card.

Note: Some digital cameras save images in other formats. Please refer to your camera's manual if your photos are not JPEG files.

Q: Why is the picture display slower with some pictures and faster with others?
A: Higher resolution pictures load more slowly. Try using lower resolution pictures or down sampling your images. See your camera's operating manual for details on downsampling your photos.

Q: Can I insert multiple memory cards?
A: Yes. Turn on the unit before inserting any card. The Card Selection Screen lets you choose between all available memory cards.

Q: Does the Dgital Picture Frame have built-in memory?
A: Yes. It has built-in of memory. The volume depends on your model.

Q: Does the Digital Picture Frame support all JPEG and Motion JPEG files?
A: No, it supports JEPG and Motion JPEG files taken from a digital camera. The Digital Picture Frame may notread all images or video files downloaded from the Internet or from other software graphic applciations. Some video formats downloaded from the Internet are not supported either.

Technical Specifications

Product:	32" LCD Digital Picture Frame
Input Formats:	Secure Digital™, Multi Media Card™, Compact Flash™, xD-Picture Card™, Memory Stick ™,Memory Stick PRO™, Memory Stick Duo™, Memory Stick PRO Duo™ and USB Flash Drives
File Format:	JPEG, AVI Motion JPEG
Features:	Individual Picture View and Slide Show Range of Transitional Styles for Slide Show Variable Speed for Slide Show Random Picture Shuffle Set Favorite Picture Copy and Save Functions Color Adjustment Functions AVI Motion JPEG Player Extendable Stand for Angle Adjustment Wall-mountable VESA hole pattern (75mm x 75mm) Setting Power On / Off Automatically
Internal Memory:	256MB
USB Ports:	USB (for USB Flash Drives)

Assembly Instructions for LP6532 Wall Mount

Safety Warning: If you do not understand these directions, or have any doubts about the safety of the installation,please call a qualified contractor.We can quickly assist you with installation questions and address any missing or damaged parts.Replacement parts for it products purchased through authorized dealers will be shipped directly to you.Check carefully to make sure there are no missing or defective parts, refer to the sheet labeled "Installation Manual" to cofirm the parts. Never use defective parts.Improper installation may cause damage or serious injury.Do not use this product for any purpose that is not explicitly specified. It will not be liable for damage or injury caused by incorrect mounting,incorrect assembly,or incorrect use.

Note: The supplied wall mounting hardware is not for steel stud walls or old cinder block walls. If you are uncertain about the nature of your wall, consult an installation contractor.
It makes every effort to assure all necessary frame mounting hardware is included. If the hardware you need is not included please consult your local hardware store or call us.

Notice: The fixing of hang on wall only suit to concrete wall

Required Tools: 3/16 drill bit, wrench or socket set, Phillips screw driver

Step 1: Mounting the wall plate to the wall wood stud mounting:

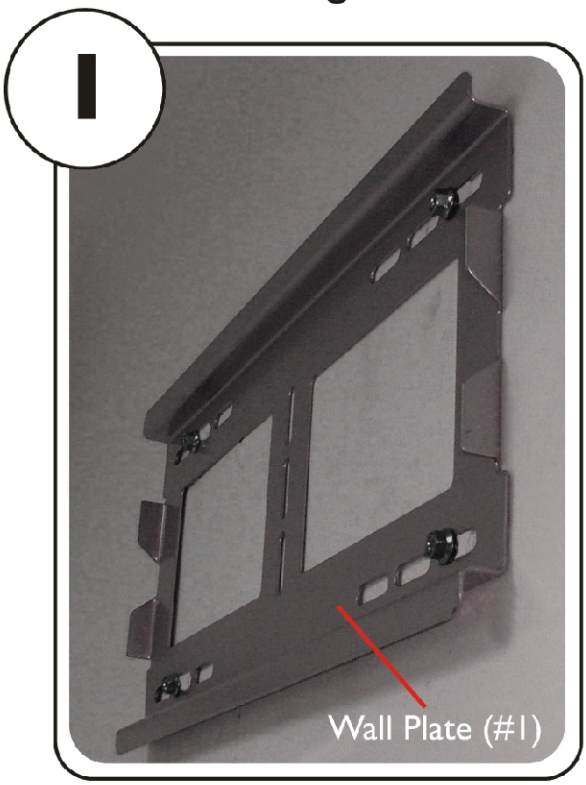

The Wall Plate (item#1) must be mounted to two wood studs at least 12" apart. Use a high quality stud sensor to locate two adjacent studs. It is a good idea to verify where the studs are located with an awl or thin nail. Pre-drill a 2.5" deep hole at the desired height in each stud using a 3/16" drill bit. Make sure these holes are in the center area of the studs and level with each other.

Use the Wall Plate as a template to mark the location of the second hole in each stud. Drill 2.5" deep holes using the 3/16" drill bit in the marked location. Attach the Wall Plate to the wall using the four 1/4 x 2.5" Metal Bolts (item #11). Make sure the Wall Plate is oriented so the vertical flat surface in the center of the plate is against the wall and a set of metal bolts is on each side of the two large squares in the center as shown in Diagram 1.

Step 2: Attaching the Brackets to the Frame

WARNING: Lay a clean fabric sheet on a flat surface and carefully place the frame face down on it or carefully lean it up against a wall or other solid surface!

The frame brackets (item#2) should be aligned vertically with the holes on the back of the frame similar to the diagram. To fasten the brackets to the frame install the hardware in the following order starting with the back of the frame: metal washer (item #8), bracket (#2), nylon washer (#10), metal washer (#7), finally the metal screw (#5 or #6). See detailed diagram 2 for assistance. Proceed to tighten the screws firmly.

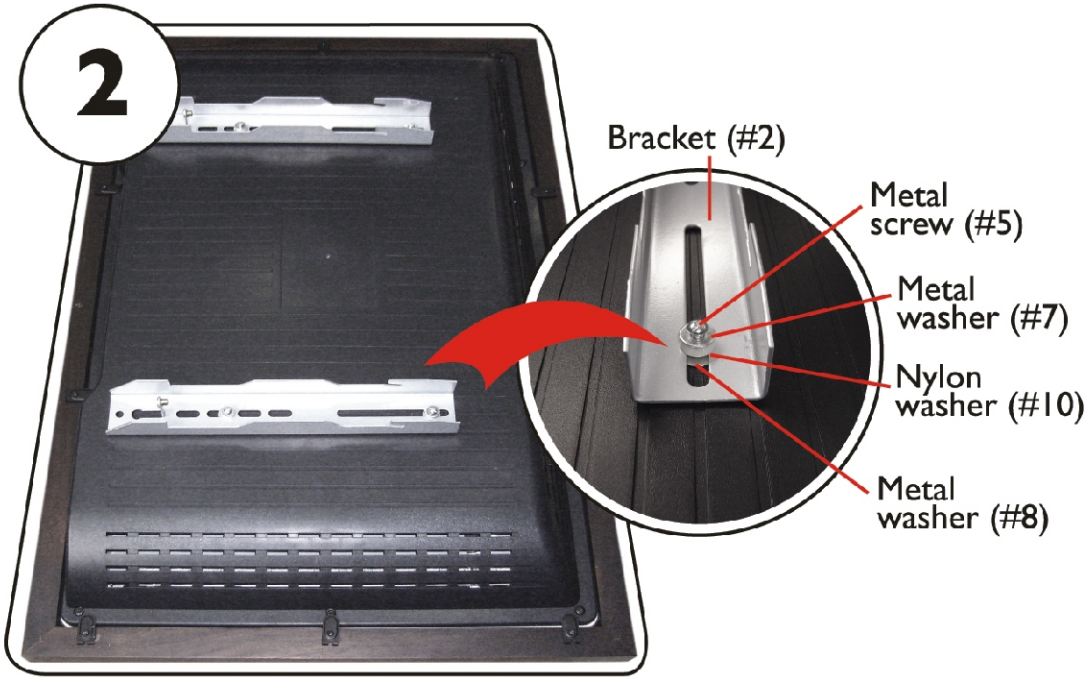

Step 3: Hang the Frame onto the Wall Plate: (strongly recommend two people for this step)

First hook the Frame Brackets (Item #2 attached to the back of the frame) over the top of the Wall Plate (previously attached to wall), then let the bottom of the Frame Brackets rotate in under the bottom of the Wall Plate. Once the Frame is in place, insert the Safety Screws (Item#3) as shown in Diagram 3.

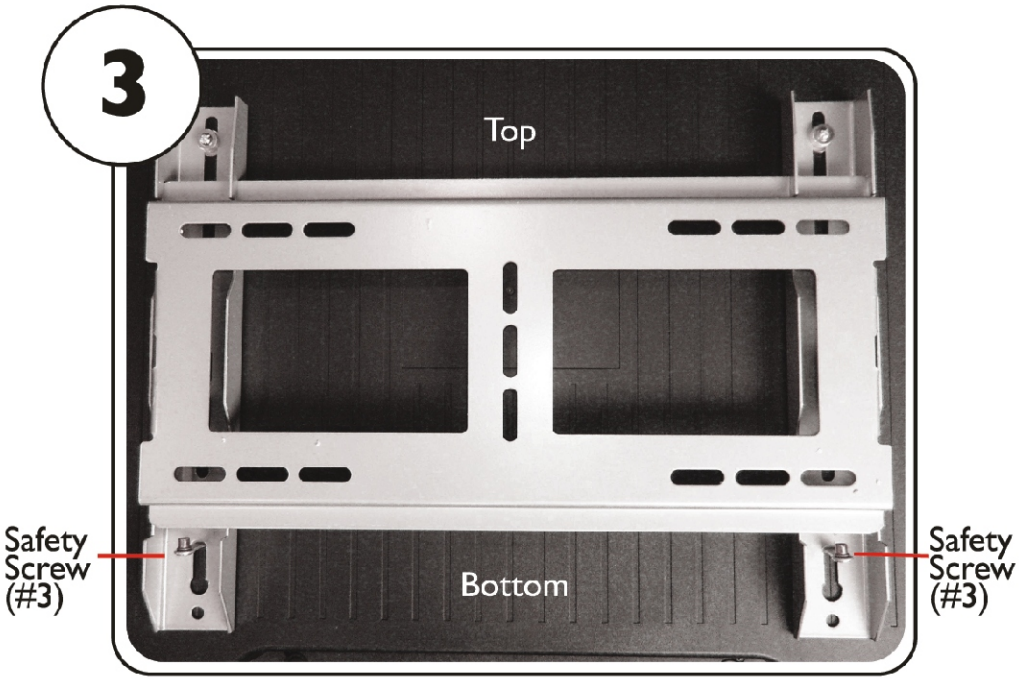

Wall-mount installation is now completed. Please plug the power cord into the digital picture frame and enjoy your beautiful pictures!